


INSTRUCTIONS FOR SLIMMATE II INSTALLATION

INTRODUCTION: Portable restrooms and accessories kits must be assembled according to approved assembly procedures. Avoid variations in assembly procedures could adversely affect product life and warranty.



****CAUTION:** The Slimmate II Handwash as well as any portable handwash unit should be cleaned and sanitized on a regular basis. **DO NOT DRINK THE WATER.**

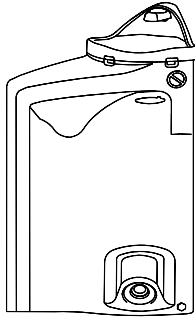


8	11368	1	WASHER, 5/16 FLAT STNLS
7	11315	2	WASHER, 3/16 RIVET STNLS
6	15340	1	WASHER, 1/4 STAR STNLS
5	12393	2	RIVET, #64 AAP POP
4	13440	1	NUT, 1/4-20 WING TYPE A STNLS
3	15469	1	NUT, 1/4-20 STNLS
2	16644	1	BRACKET, SLIMMATE II MOUNTING
1	13439	1	BOLT, 1/4-20 X 1 ELEVTR STNLS
ITEM #	PART #	QTY	DESCRIPTION

TOOLS: *Elect/Cordless Drill *1/4 Drill Bit *5/16 Drill Bit *1-1/8 Hole Saw/Drill Bit *Pencil *Adjustable Wrench



- 1. If Installing in Global Toilet:** Mounting hole needs to be moved and re-drilled. (See figure #1)
- 2. Bracket Mounting:** Rivet metal bracket to back of pump plate using (2) Rivets and (2) washers. (See figure #2)

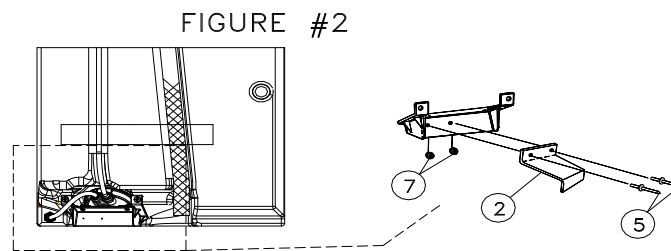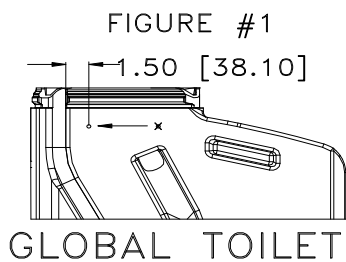

- 3. Set the Slimmate II in the Proper Location:** (See figure #3) Slide metal bracket between the panel and base. Remove the Basin and mark the panel through the top predrilled hole, remove Slimmate and drill with 1/4 drill bit. (See figure #4)

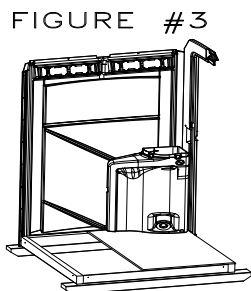

- 4. Drain hose location:** Drill 1-1/8" hole through the front right corner of the tank. Use dimple if tank has one. (See figure #5)
 - MX2 EW:** Attach the king nipple to the threaded fitting on waste tank floor. Attach the drain hose to the king nipple with a #12 hose clamp. Slide bracket between tank and panel wall.
- 5. Fastening Slimmate to Panel:** Place Slimmate back in to the proper mounting location and fasten Slimmate to panel. (See figure #6) **NOTE:** (It is very important that all hoses are in their appropriate relief channels.)
- 6. Place Slimmate drain hose into waste tank.** Fasten Basin back onto the Slimmate.

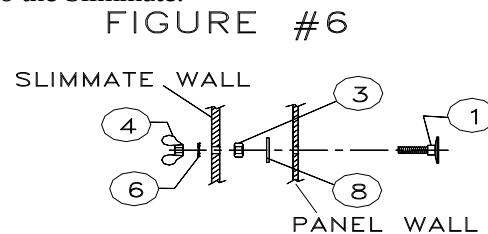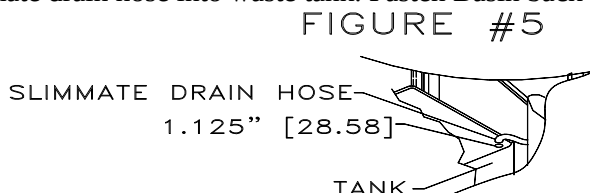

2530 Xenium Lane North, Minneapolis, MN 55441
 Telephone: 763-553-1900 Fax: 763-553-1905
 800-328-3332 web: www.satelliteindustries.com